

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

### READ ALL INSTRUCTIONS BEFORE USING.

### KEEP AWAY FROM WATER.

**DANGER** — Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

### CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to place of purchase or an authorized Rusk service representative only. No repairs should be attempted by the consumer.

### STORAGE - IMPORTANT

When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

**WARNING** — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to place of purchase for examination and repair.
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
7. Never use while sleeping.
8. Never drop or insert objects into any opening.

### HASSLE-FREE 1-YEAR WARRANTY

This warranty is available only to consumers who purchase products directly from BaBylissPRO or an authorized BaBylissPRO reseller. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners or consumers who purchase from unauthorized BaBylissPRO resellers.

BaBylissPRO will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials and was purchased directly from BaBylissPRO or an Authorized BaBylissPRO Reseller.

Your ultimate satisfaction in BaBylissPRO products is our goal so if your item should fail within the generous warranty period, we will repair it and/or if necessary, replace it at no cost to you. To obtain a return shipping label email us at <https://babylisspro.com/warranty-page>. Or call our toll free customer service department at 800-326-6247 to speak with a representative.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. Air outlet grille and attachments may be very hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. To prolong the life of the dryer, keep filters clear of hair and dust.
16. Do not use with a voltage converter.
17. This appliance is not a toy. Keep away from children.
18. **Warning:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
19. When the hair dryer is used in bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off.



20. For additional protection, the installation of a residual current device (RCD), having a rated residual operating current not exceeding 30mA, is advisable in the electrical circuit supplying the bathroom. Ask your electrician for advice.

21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

### For a dual voltage hair dryer:

22. Be sure dual voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage contained in this instruction section of this manual.
23. This appliance was set at the factory to operate at 125 volts. Refer to Additional Information section of this manual for conversion to 250 volts operation.

## SAVE THESE INSTRUCTIONS

### SERVICE CENTER BaBylissPRO

Service Department  
7475 North Glen Harbor Blvd.  
Glendale, AZ 85307

## OPERATING INSTRUCTIONS

This appliance is intended for professional use. Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 110-125 or 220-250 volts A.C.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## IMPORTANT SAFETY PLUG INSTRUCTIONS

This hair dryer is equipped with an auto monitoring ALCI safety plug. **READ AND SAVE THE INSTRUCTIONS PROVIDED IN A SEPARATE LEAFLET.**

### SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair well with superior quality shampoos, conditioners, and finishing products.

### DRYING BASICS

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel-blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through one section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid overdrying and possible damage to hair or skin, do not concentrate heat on one section for any length of time. Keep dryer moving as you style.
4. For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with cooler air.
6. This dryer includes a concentrator attachment. Use the attachment when you need drying power in a small area (such as a curl or a wave), or when you want to relax curly hair.

### NANO TITANIUM™

Your Nano Titanium™ dryer has many benefits. Nano Titanium™ is an exceptional conductor of heat and is stable in ultra-high temperatures. The Nano Titanium™ technology uses micro particles of titanium that provide the ultimate heat performance for beautiful, healthy hair results. Nano Titanium™ yields maximum far-infrared heat-penetrating the hair from within for gentle drying without damaging hair. Nano Titanium™ emits negative ions in their most beneficial form for faster drying, locking in hair's own natural moisture. This Nano Titanium™ dryer will give your hair a smooth, silky shine while eliminating frizz.

### GET TO KNOW YOUR HAIRDRYER

Models BNTRG053TUC  
BNT053TUC



### ADDITIONAL INFORMATION

#### FOR DUAL-VOLTAGE DRYERS

For use in North America, the voltage selector switch should be placed in the 125 position. For use in several countries overseas, the voltage selector may need to be placed in the 250 position. Confirm the voltage available at each overseas location before using the appliance. For connection to a 250-volt supply, use an attachment plug adapter of the proper configuration for the power supply.

#### For 110-125 Volt Operation

Flick the dual voltage switch to the 125 position. In this position, the dryer has two settings. It provides two speeds and two heat settings — low speed and low heat on LO and high speed and high heat on HI.

#### For 220-250 Volt Operation

Flick the dual voltage switch to the 250 position. In this position, the dryer has two settings. It provides two speeds and two heat settings — low speed and low heat on LO and high speed and high heat on HI. Do not change to 125 position when operating on 250V. A plug adapter may be necessary in certain countries.

### BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, gently toss head back and brush hair into place.

### STRAIGHTENING

Work with hair in sections when creating a super-straight look. Using a large round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.

### MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.



This message about...

**G**ROUND

**F**AULT

**C**IRCUIT

**I**NTERRUPTERS

...can save a life!

## INSTRUCCIONES IMPORTANTES DE SEGURIDAD ACERCA DEL ENCHUFE

Este aparato cuenta con un enchufe equipado con un interruptor de control de potencia (ALCI, por sus siglas en inglés) automático.

### LEA Y GUARDE LAS INSTRUCCIONES PROPORCIONADAS EN EL FOLLETO ADJUNTO.

#### GUÍA PARA UN SÚPER PEINADO

La mejor apariencia empieza por un corte de cabello bien mantenido. Siempre cuide su cabello con champús, acondicionadores y productos de peinado de calidad superior.

### FUNDAMENTOS DEL SECADO

1. Lave y acondicione el cabello con los productos deseados. Enjuague bien. Séquelo con una toalla para eliminar el exceso de agua. Divida el cabello en secciones. Seque el cabello usando simultáneamente el secador y un cepillo. Coloque el cepillo debajo de cada sección de cabello y dirija el flujo de aire caliente hacia la parte superior del cabello. Mueva el cepillo y el secador lenta y simultáneamente hasta las puntas. Dirija el flujo de aire hacia el cabello, no hacia el cuero cabelludo.
2. Mantenga las entradas de aire del aparato sin obstrucciones y libres de cabello.
3. Para no dañar el cabello o la piel, no concentre el flujo de aire en una sección solamente; mueva el secador constantemente.
4. Para realizar retoques rápidos entre lavados, rocíe un poco de agua sobre el cabello antes de secarlo.
5. Cuando usa el secador para crear rizos y ondas, seque el cabello casi por completo, usando aire tibio, y luego fije el peinado usando aire frío.
6. Este secador incluye concentrador de aire. Utilice la boquilla concentradora cuando necesite secar rápidamente una sección pequeña, como un rizo o una onda, o para alisar el cabello.

### FAMILIARÍCESE CON SU SECADOR

Modelos BNTRG053TUC  
BNT053TUC



### INFORMACIÓN ADICIONAL

#### PARA LOS APARATOS DE DOBLE VOLTAJE

Ponga el selector de voltaje en la posición "125" para uso en los Estados Unidos y en la posición "250" para uso en países con suministro eléctrico de 220 a 250 voltios. Averigüe el voltaje antes de enchufar el aparato. En ciertos países, será necesario utilizar un adaptador de enchufe.

#### Operación 110-125 voltios

Ponga el selector de voltaje en la posición "125". El aparato funcionará con todos los ajustes de calor y de velocidad: calor y velocidad bajos (LO) y calor y velocidad altos (HI).

#### Operación 220-250 voltios

Ponga el selector de voltaje en la posición "250". El aparato funcionará con todos los ajustes de calor y de velocidad: calor y velocidad bajos (LO) y calor y velocidad altos (HI).

