

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

**READ ALL INSTRUCTIONS BEFORE USING. KEEP AWAY FROM WATER.**

**DANGER** – Any appliance is electrically live even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

**WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments

not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to place of purchase for examination and repair.

5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
7. Never use while sleeping.

8. Never drop or insert objects into an opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered

10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. Air outlet grille and attachments may be very hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. To prolong the life of the dryer, keep filters clean of hair and dust.
16. Do not use with voltage converter.

**SAVE THESE INSTRUCTIONS**


## OPERATING INSTRUCTIONS

This appliance is intended for professional use. Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 110 to 130 volts A.C. This dryer is not dual voltage. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE DRYER.

This hair dryer is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure the ALCI is functioning properly, perform the following test: The purpose of this test is to allow you to make sure the exclusive water sensing system (ALCI) is working.

1. Plug in hair dryer and press test button on plug (see appropriate diagram).
2. Hair dryer will stop working. There will be an audible click and reset button will pop out.
3. To reset ALCI with a reset button: Unit should be

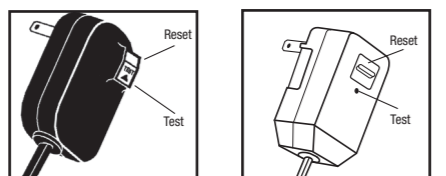

unplugged. Then push reset button in, and reinsert plug into outlet.

4. If ALCI is not functioning properly, return hair dryer to place of purchase.
5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.
6. Be sure to repeat test every time you use hair dryer to confirm ALCI is operational.

Should the dryer go off and the ALCI reset button pop up during use, this could indicate a malfunction in the dryer. Remove plug from outlet and allow the dryer to cool. Push the reset button in and reinsert plug into outlet. Dryer should function normally. If not, return to a BaByliss® Pro Service Center for examination and repair.

**SUPER STYLING GUIDE**  
Your best looks begin with a good haircut that's well maintained. Always treat hair well with superior quality shampoos, conditioners, and finishing products.

### DRYING BASICS

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel-blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through one section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid overdrying and possible damage to hair or skin, do not concentrate heat on one section for any length of time. Keep dryer moving as you style.
4. For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.

5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with cooler air.

6. This dryer includes a concentrator attachment. Use the attachment when you need drying power in a small area (such as a curl or a wave), or when you want to relax curly hair.

**IONIC**  
This dryer features ionic technology! Negative ions are released from an ion generator. When negative ions collide with positive ions on the hair, static electricity is reduced. Hair is left shiny, silky and more manageable. Additionally, negative ions help to break apart water molecules, in turn reducing drying time.

**TOURMALINE**  
Tourmaline, a pure, semiprecious gemstone, is a natural source of negative ions and far-infrared heat. Negative ions eliminate frizz and close the cuticle to create smooth, shiny hair. Negative ions also break apart water molecules more quickly, reducing drying time for moisture-rich hair. Far-infrared heat penetrates hair from within, resulting in faster drying.

### TITANIUM

Your Tourmaline Titanium™ dryer has many benefits. Titanium is an exceptional conductor of heat and is stable in ultra-high temperatures. The titanium technology uses micro particles of titanium that provide the ultimate heat performance for beautiful, healthy hair results. Titanium yields maximum far-infrared heat, penetrating the hair from within for gentle drying without damaging hair. Titanium emits negative ions in their most beneficial form for faster drying, locking in hair's own natural moisture. This Tourmaline Titanium™ dryer will give your hair a smooth, silky shine while eliminating frizz.

## WARNING THIS APPLIANCE IS DESIGNED EXCLUSIVELY FOR USE BY LICENSED COSMETOLOGISTS.

### GET TO KNOW YOUR HAIR DRYER



### 1. BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, gently toss head back and brush hair into place.

### 2. STRAIGHTENING

Work with hair in sections when creating a super straight look. Using a large round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.

### 3. MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.

**IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI\* NOW!**

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.



This message about

**G**ROUND  
**F**AULT  
**C**IRCUIT  
**I**NTERRUPTERS

...can save a life!

### WHY DO YOU NEED A GFCI?

Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you...even if the switch is off. A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

**A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!**



\*GFCI is a sensitive device which reacts immediately to a small electric current leak by stopping the flow of electricity.

### USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. The dryer must be kept clean for proper operating performance. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a damp cloth only.

**Blocked or clogged air intake vents will cause the dryer to overheat.** If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, turn the dryer off, unplug the cord, and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

## CAUTION

**NEVER** allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to place of purchase or an authorized BaByliss® PRO service representative only. No repairs should be attempted by the consumer.

### STORAGE – IMPORTANT

When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. **Do not wrap line cord around dryer.** Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

### LIMITED 24-MONTH WARRANTY

BaByliss® PRO will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt and \$5.00 for postage and handling. (California residents need only provide proof of purchase and should call 1-800-326-6247 for shipping instructions.) In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND**

**FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

**IN NO EVENT SHALL BABYLIS® PRO BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER.** Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**Service Center**  
**BaByliss® PRO**  
Service Department  
7475 North Glen Harbor Blvd.  
Glendale, AZ ©2009 BaByliss® PRO



**BaByliss PRO TT**  
TOURMALINE TITANIUM

**TOURMALINE TITANIUM 5000**  
Manual de Instrucciones  
Modelo BABTTW5586  
Diseñado exclusivamente para los peluqueros profesionales

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.



## MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

### LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA.

### PELIGRO

– Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de muerte o herida por descarga:

1. Siempre desconecte el aparato inmediatamente después de usarlo.
2. No lo use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato cayera al agua, desconéctelo inmediatamente. **No toque el agua.**

### ADVERTENCIA

– Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. Nunca deje el aparato desatendido mientras esté conectado.
2. Este aparato no debería ser usado por, sobre o cerca de niños o personas con alguna discapacidad.
3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las

instrucciones. Sólo use accesorios recomendados por el fabricante.

## INSTRUCCIONES DE USO


Este aparato fue diseñado para uso profesional. Úselo solamente con Corriente Alterna de 110 a 130V (60 hertzios).

El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en el tomacorriente polarizado. Si no entrara en el tomacorriente, invírtela. Si aún no entrara completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

### PRUEBE EL CORTACIRCUITO DE SEGURIDAD ANTES DE CADA USO

Este aparato está dotado de un cortacircuito de seguridad llamado ALCI (Appliance Leakage Circuit Interrupter), que apaga el aparato inmediatamente si éste cayera al agua. Haga la prueba siguiendo para asegurarse que el sistema de detección de agua funcione correctamente:

1. Enchufe el aparato y apriete el botón de prueba (véase el gráfico más abajo).
2. El aparato dejará de funcionar, se oirá un clic y el botón de reajuste saltará.
3. Para reajustarlo, desconecte el aparato, apriete



el botón de reajuste luego vuelva a conectar el aparato.

### 4. Si el cortacircuito de seguridad no funcionara correctamente, regrese el aparato a un centro de servicio autorizado.

5. Si el aparato cayera al agua, es muy importante que lo mande a un centro de servicio autorizado. No intente reajustarlo.

6. Pruebe el cortacircuito de seguridad antes de cada uso para asegurarse que esté operativo.

Si el secador se apagara y el botón de reajuste saltara durante el uso, esto podría indicar un mal funcionamiento. Si esto ocurriera, desconecte el aparato, permita que enfríe y conéctelo otra vez. El aparato debería funcionar normalmente. Si no fuera el caso, regréselo a un centro de servicio autorizado para que lo revisen y lo reparen.

### GUÍA PARA UN SÚPER PEINADO

La mejor apariencia empieza por un recorte de cabello bien mantenido. Siempre cuide su cabello con champúes, acondicionadores y productos de acabado de calidad superior.

### FUNDAMENTOS DEL SECADO

1. Lave y acondicione su cabello con los productos deseados. Enjuáguelo bien y séquelo con una toalla para eliminar el exceso de agua. Divida el cabello en secciones. Siga el cabello usando simultáneamente el secador y un cepillo. Coloque el cepillo debajo de cada sección de cabello y dirija el flujo de aire caliente hacia la parte superior del cabello. Mueva el cepillo y el secador lenta y simultáneamente hasta las puntas, dirigiendo el flujo de aire hacia el cabello, no hacia el cuero cabelludo.
2. Mantenga las entradas de aire del aparato sin obstrucciones y libres de pelo.
3. Para no lastimar el cabello, no concentre el flujo de aire en una sección solamente.
4. Para realizar retoques rápidos entre lavados, rocíe un

poco de agua sobre el cabello antes de secarlo.

5. Cuando use el secador para crear bucles y ondas, seque el cabello casi por completo usando un ajuste de temperatura bajo, luego fije el peinado usando el disparo de aire frío.

6. Este secador incluye un concentrador de aire. Utilice la boquilla concentradora cuando necesite secar rápidamente una sección pequeña, como una onda, o para alisar el cabello rizado.

### TECNOLOGÍA IÓNICA

¡Este secador utiliza la tecnología iónica! Un generador de iones genera iones negativos que ayudan a reducir la estática cuando chocan con los iones positivos presentes en el cabello. Deja el cabello brillante, sedoso y más dócil. Además, los iones negativos ayudan a desagregar las moléculas de agua, lo cual reduce el tiempo de secado.

### TURMALINA

La turmalina es una piedra preciosa pura, fuente natural de iones negativos y de calor infrarrojo lejano. Los iones negativos eliminan el frizz, sellan la cutícula y dejan el cabello suave y con brillo. Los iones negativos deshacen las moléculas de agua para un secado suave que mantiene el balance hídrico del cabello. El calor infrarrojo lejano penetra en el tallo del pelo para.

### TITANIO

Su Secador Tourmaline Titanium™ brinda muchas ventajas. El Titanio es un excelente conductor del calor que permanece estable en temperaturas muy altas. La tecnología del titanio utiliza micro-partículas de titanio para lograr un desempeño óptimo y dejar el cabello hermoso y saludable. El titanio emite calor infrarrojo lejano que penetra profundamente en el tallo del pelo para secar el cabello desde adentro, sin lastimarlo. El titanio también emite iones negativos para lograr un secado más rápido y mantener el balance hídrico del cabello. El secador Tourmaline Titanium™ dejará su cabello suave y sedoso mientras eliminará el frizz.

## ADVERTENCIA

### ESTE APARATO HA SIDO DISEÑADO EXCLUSIVAMENTE PARA LOS PELUQUEROS PROFESIONALES

### FAMILIARÍCESE CON SU SECADOR

Modelo BABTTW5586



### 1.



### 2.



### 3.



### 1. CUERPO Y VOLUMEN

Para dar más volumen al cabello, incline la cabeza hacia delante durante el secado. Dirija el flujo de aire hacia las raíces para obtener más cuerpo. Cuando el cabello esté seco, péñese en la forma deseada.

### 2. ALISADO

Para alisar el cabello, estire cada sección con un cepillo redondo grande de aproximadamente 5 cm de diámetro. Doble un poco las puntas hacia abajo mientras seca.

### 3. ONDULADO

Para crear ondas despeinadas de apariencia natural, estruje las raíces con los dedos mientras seca el cabello.

### ¡SI DEBE USAR EL SECADOR EN EL CUARTO DE BAÑO, INSTALE UN GFCI\* AHORA!

Su electricista le puede ayudar a decidir cual sistema escoger – un sistema amovible que se conecta al tomacorriente o un sistema permanente que él instalará. El Código Nacional de Electricidad ahora exige que todos los enchufes ubicados en los cuartos de baño, los garajes y las partes exteriores de las casas nuevas sean equipados con GFCI.



Este mensaje sobre los...

# G R O U N D F A U L T C I R C U I T I N T E R R U P T E R S

(Interruptores de circuito contra fallas a tierra)

¡Puede salvar una vida!

### ¿POR QUÉ NECESITA UN GFCI?

La electricidad y el agua no deben juntarse. Si su aparato cayera al agua mientras esté conectado, una descarga eléctrica podría causar su muerte... aunque el interruptor esté apagado. Un fusible o un interruptor de circuito regular no le protegerá en esta situación. Un GFCI ofrece más protección.

¡Un GFCI puede salvar su vida! ¡Comparado con ella, el precio es bajo! ¡No espere... instale uno ahora mismo!

\* Un GFCI es un dispositivo sensible que reacciona inmediatamente a una pequeña pérdida de corriente, deteniendo el flujo de electricidad.

### INSTRUCCIONES DE MANTENIMIENTO

Su secador casi no necesita mantenimiento. No necesita lubricación. Para que funcione correctamente, debe mantenerlo limpio. Cuando sea necesario limpiarlo, desconéctelo, permita que enfríe y saque el polvo y las pelusas de las aberturas de aire con un cepillo pequeño o el cepillo accesorio de una aspiradora. La superficie exterior del secador sólo se debe limpiar con un paño ligeramente húmedo.

El secador se recalentará si las aberturas de aire estuvieran bloqueadas u obstruidas. Si esto ocurriera, un sistema de seguridad apagará el secador o cortará la temperatura automáticamente para evitar daños al aparato o heridas. Si esto sucediera, desenchufe el aparato y permita que enfríe durante 10 a 15 minutos antes de encenderlo de nuevo. Asegúrese que las ventilaciones de aire estén limpias.

## PRECAUCIÓN

**NUNCA** jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato. Esto podría dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Inspeccione el cable con frecuencia para asegurarse que no esté dañado. Deje de usar el aparato inmediatamente si el cable parece dañado o si el aparato dejara de funcionar o funcionara de manera intermitente.

Si el cable o el aparato estuviesen dañados o si el aparato no funcionase correctamente, regréselo a un centro de servicio autorizado. No trate de repararlo.

### ALMACENAJE – IMPORTANTE

Después de usar el aparato, desconéctelo, permita que enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No enrolle el cable alrededor del aparato. Permita que el cable cuelgue o que la junta que lo conecta al secador esté suelta y recta.

### GARANTÍA LIMITADA DE 24 MESES

BaByliss®PRO reparará o reemplazará (a su opción) su aparato sin cargo por un periodo de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de \$5.00US por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-326-6247 para recibir instrucciones de envío. En ausencia del recibo de compra, el periodo de garantía será de 24 meses a partir de la fecha de fabricación.

**CUALQUIERA GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24**

**MESES DE LA PRESENTE GARANTÍA ESCRITA.** Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

**BABYLISS®PRO NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.** Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

**CENTRO DE SERVICIO**  
**BaByliss®PRO**  
Service Department  
7475 North Glen Harbor Blvd.  
Glendale, AZ 85307



# BaByliss PRO TI

TOURMALINE TITANIUM

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.



**TOURMALINE TITANIUM 5000**  
**Dryer Instructions/ Styling Guide**  
Model BABTTW5586  
Designed exclusively for licensed cosmetologists

©2009 BaByliss®PRO

09BA12130 IB-9132A